




ADA3060 SHOWER PAN


RAMP60 ACCESS RAMP
(AVAILABLE SEPARATELY.
SEE RAMP60 PRODUCT SHEET)

ADA3060 SOLID SURFACE SHOWER PAN

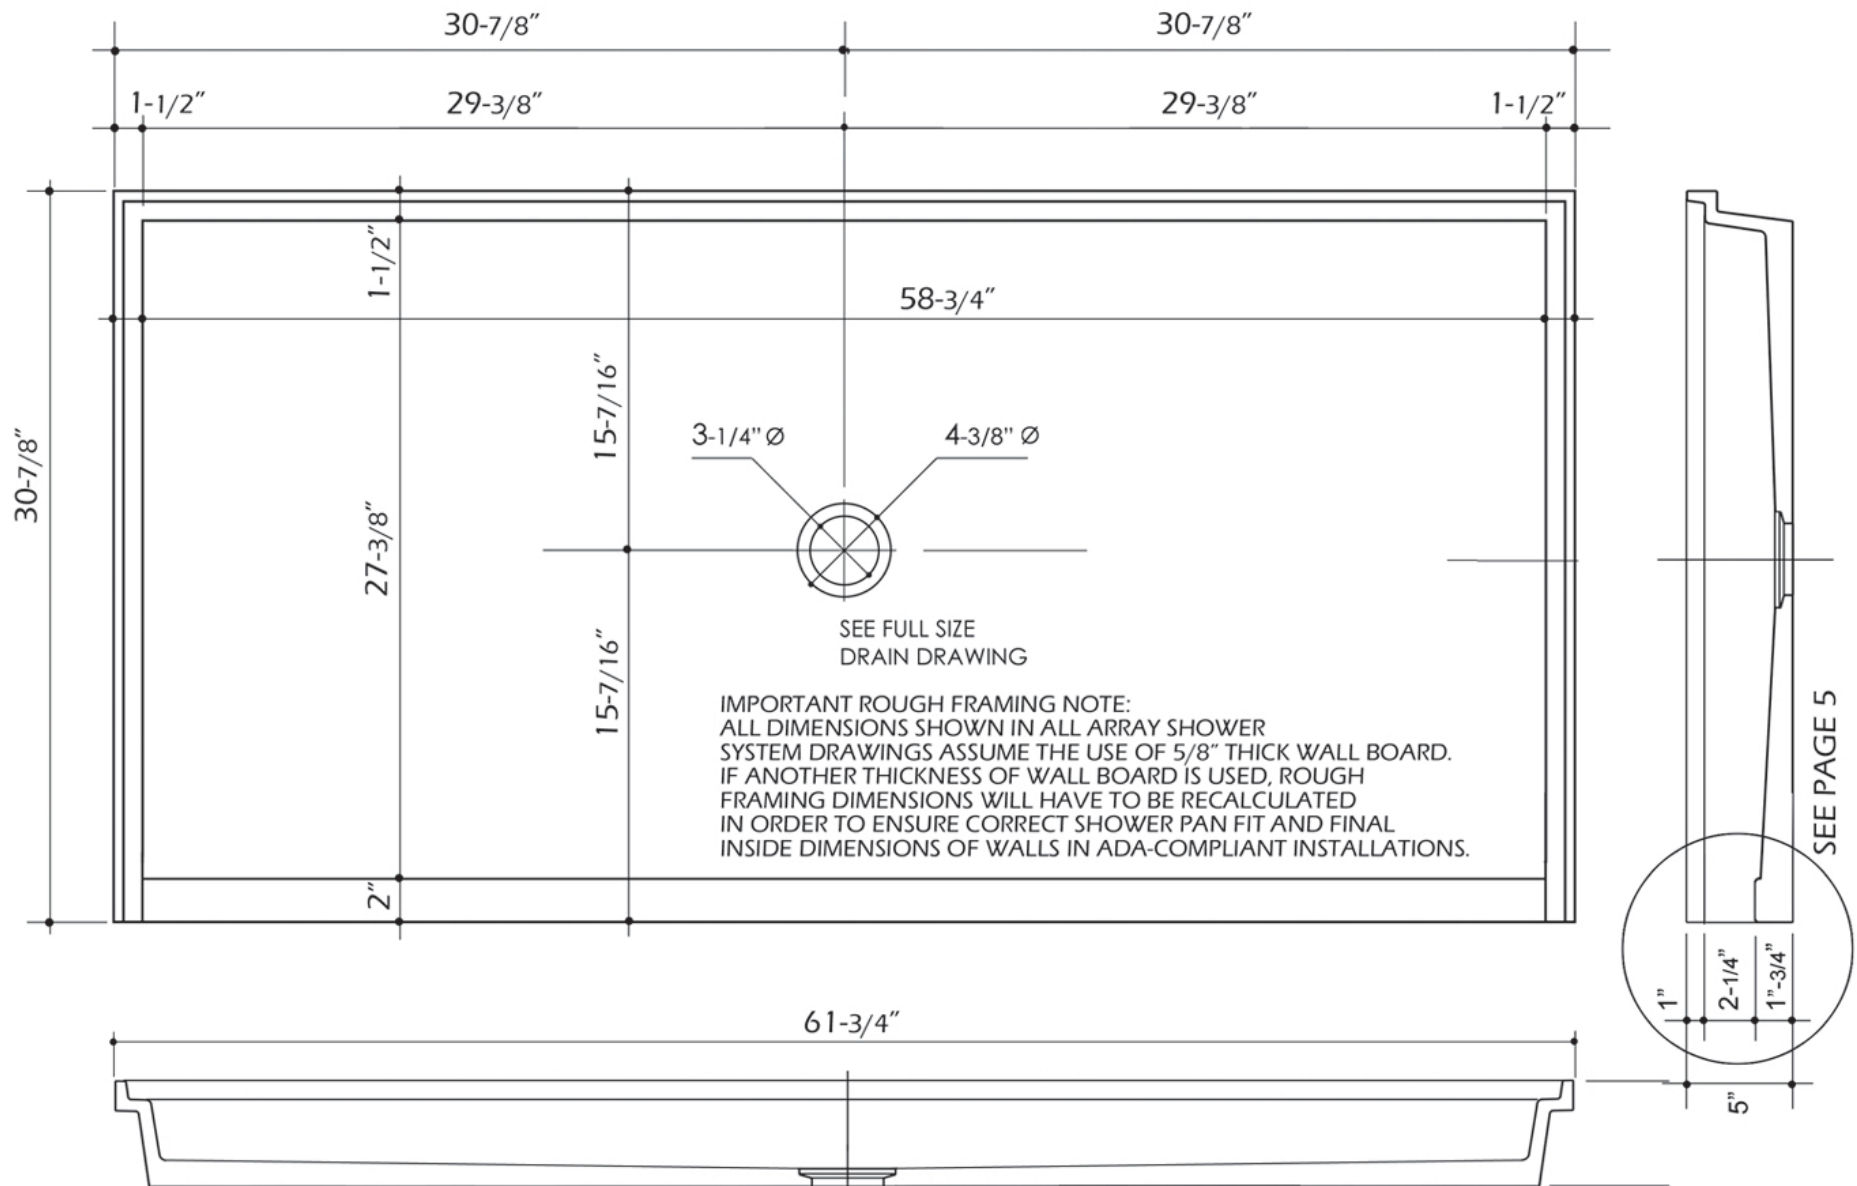

ADA3060 SHOWER PAN DIMENSIONS
30-7/8"D X 61-3/4"W


SCALE: NONE

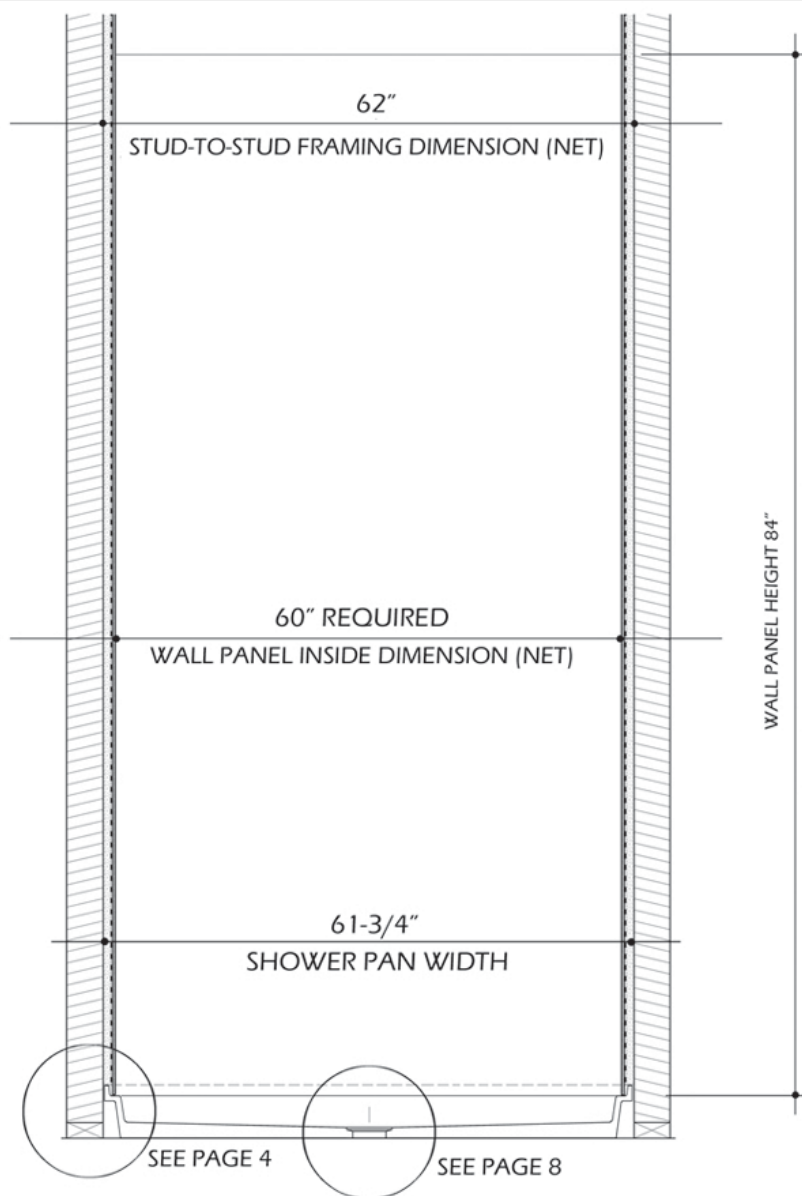

SECTION THROUGH FRONT OF
ADA3060 SHOWER PAN INSTALLATION

SCALE: NONE


IMPORTANT ROUGH FRAMING
NOTE: ALL DIMENSIONS
SHOWN IN ALL ARRAY
SHOWER SYSTEM DRAWINGS
ASSUME THE USE OF 5/8"
THICK WALL BOARD. IF
ANOTHER THICKNESS OF
WALL BOARD IS USED, ROUGH
FRAMING DIMENSIONS WILL
HAVE TO BE RECALCULATED
IN ORDER TO ENSURE
CORRECT SHOWER PAN FIT
AND FINAL INSIDE
DIMENSIONS OF WALLS IN
ADA-COMPLIANT
INSTALLATIONS.

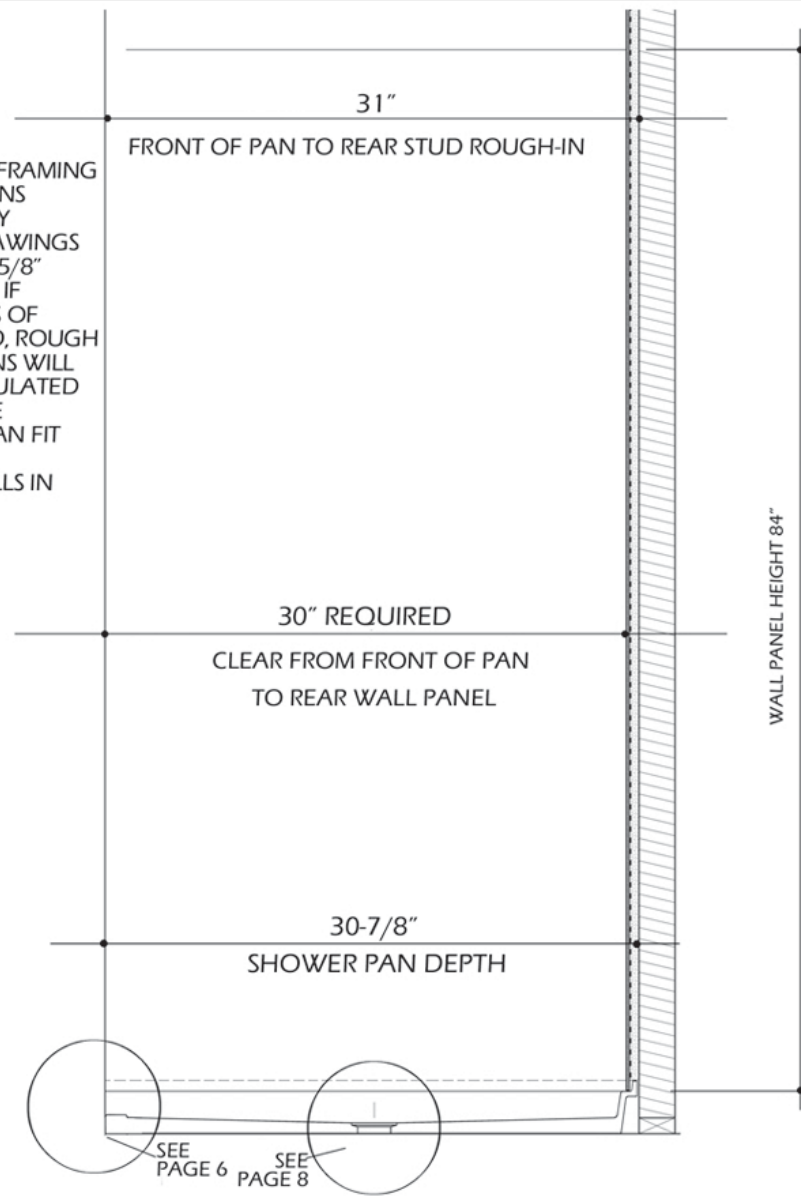

SECTION THROUGH SIDE OF
ADA3060 SHOWER PAN INSTALLATION

SCALE: NONE

IMPORTANT ROUGH FRAMING NOTE:
ALL DIMENSIONS SHOWN IN ALL ARRAY
SHOWER SYSTEM DRAWINGS ASSUME
THE USE OF 5/8" THICK WALL BOARD.
IF ANOTHER THICKNESS OF WALL BOARD
IS USED, ROUGH FRAMING DIMENSIONS
WILL HAVE TO BE RECALCULATED
IN ORDER TO ENSURE CORRECT SHOWER
PAN FIT AND FINAL INSIDE DIMENSIONS
OF WALLS IN ADA-COMPLIANT
INSTALLATIONS.

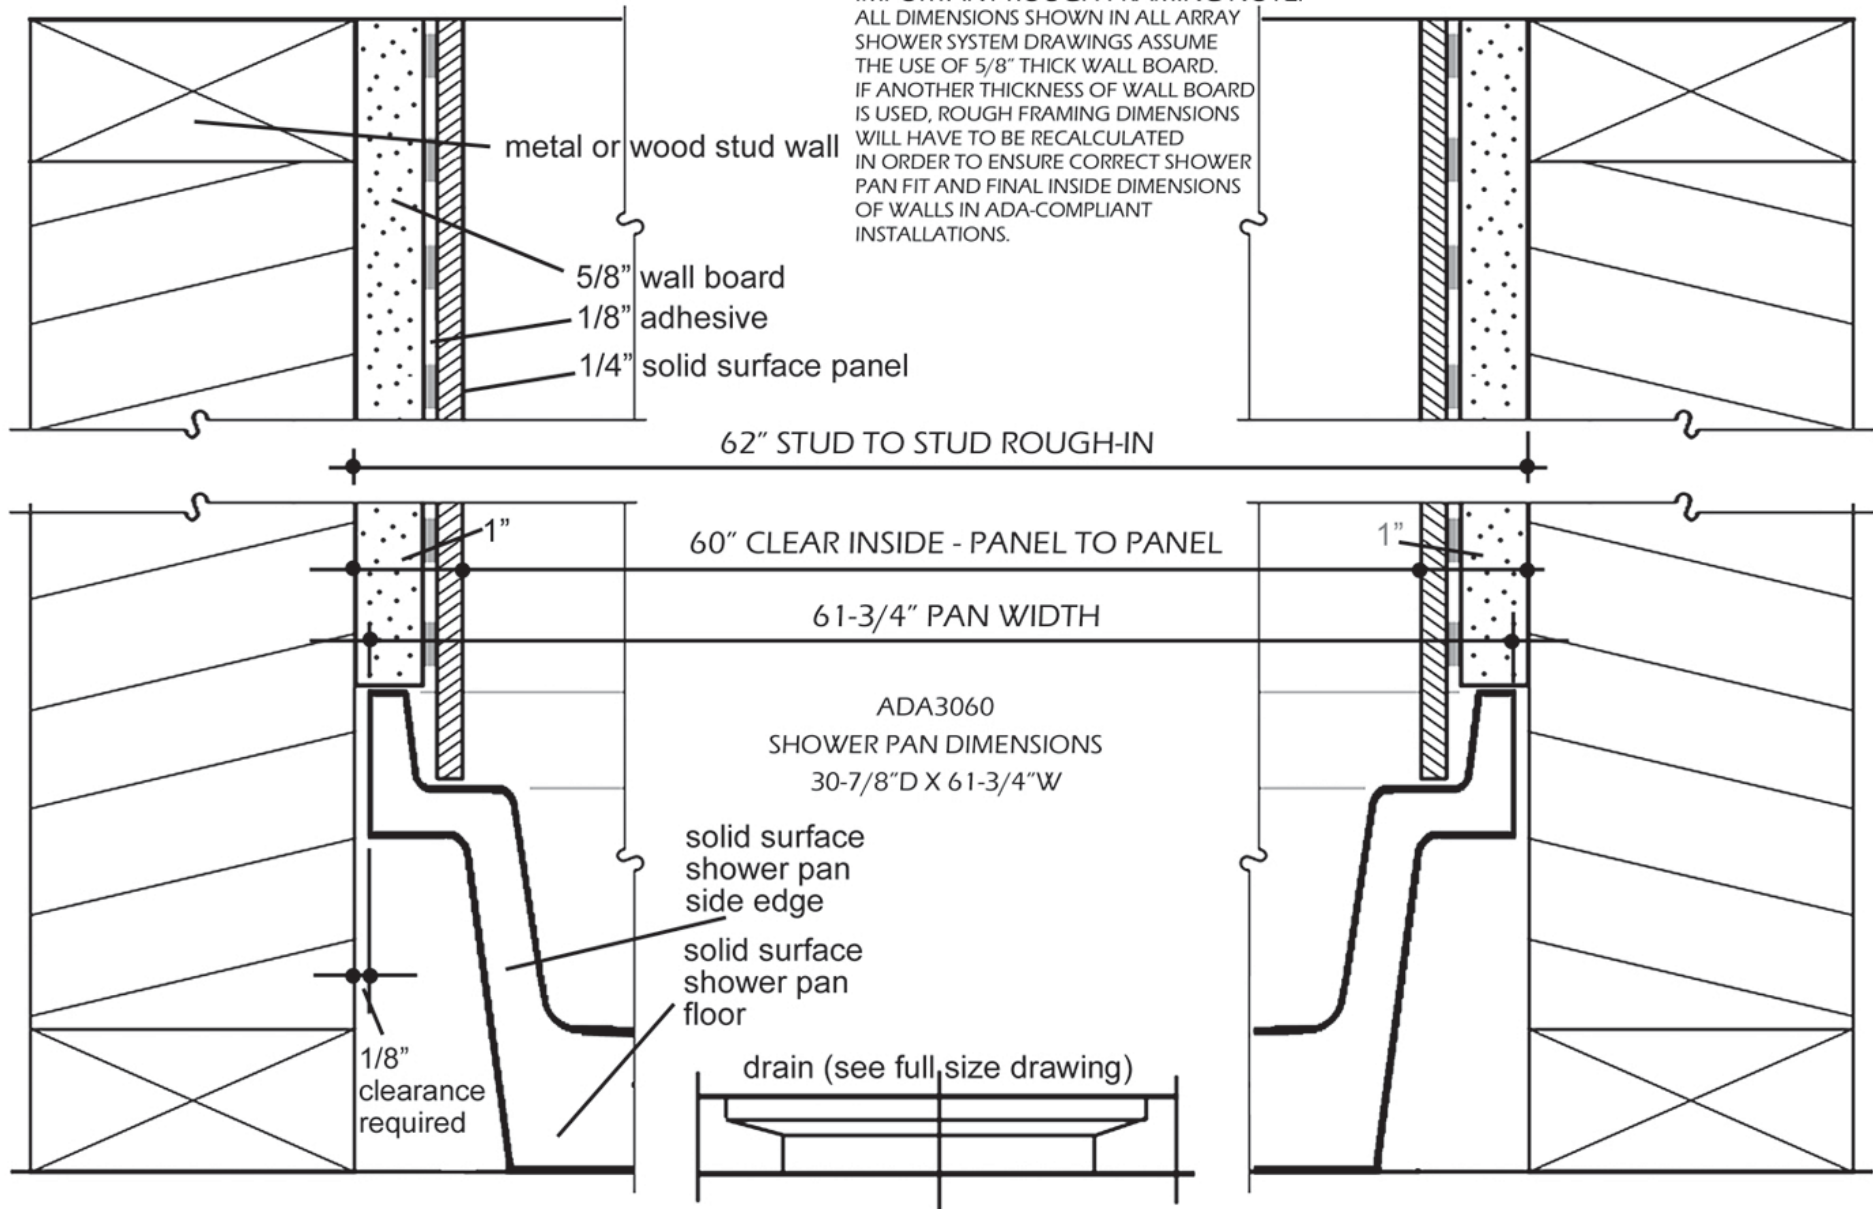


SECTION THRU FRONT VIEW OF SHOWER PAN INSTALLATION

Scale: 1/2" = 1"


IMPORTANT ROUGH FRAMING NOTE:

ALL DIMENSIONS SHOWN IN ALL ARRAY SHOWER SYSTEM DRAWINGS ASSUME THE USE OF 5/8" THICK WALL BOARD. IF ANOTHER THICKNESS OF WALL BOARD IS USED, ROUGH FRAMING DIMENSIONS WILL HAVE TO BE RECALCULATED IN ORDER TO ENSURE CORRECT SHOWER PAN FIT AND FINAL INSIDE DIMENSIONS OF WALLS IN ADA-COMPLIANT INSTALLATIONS.

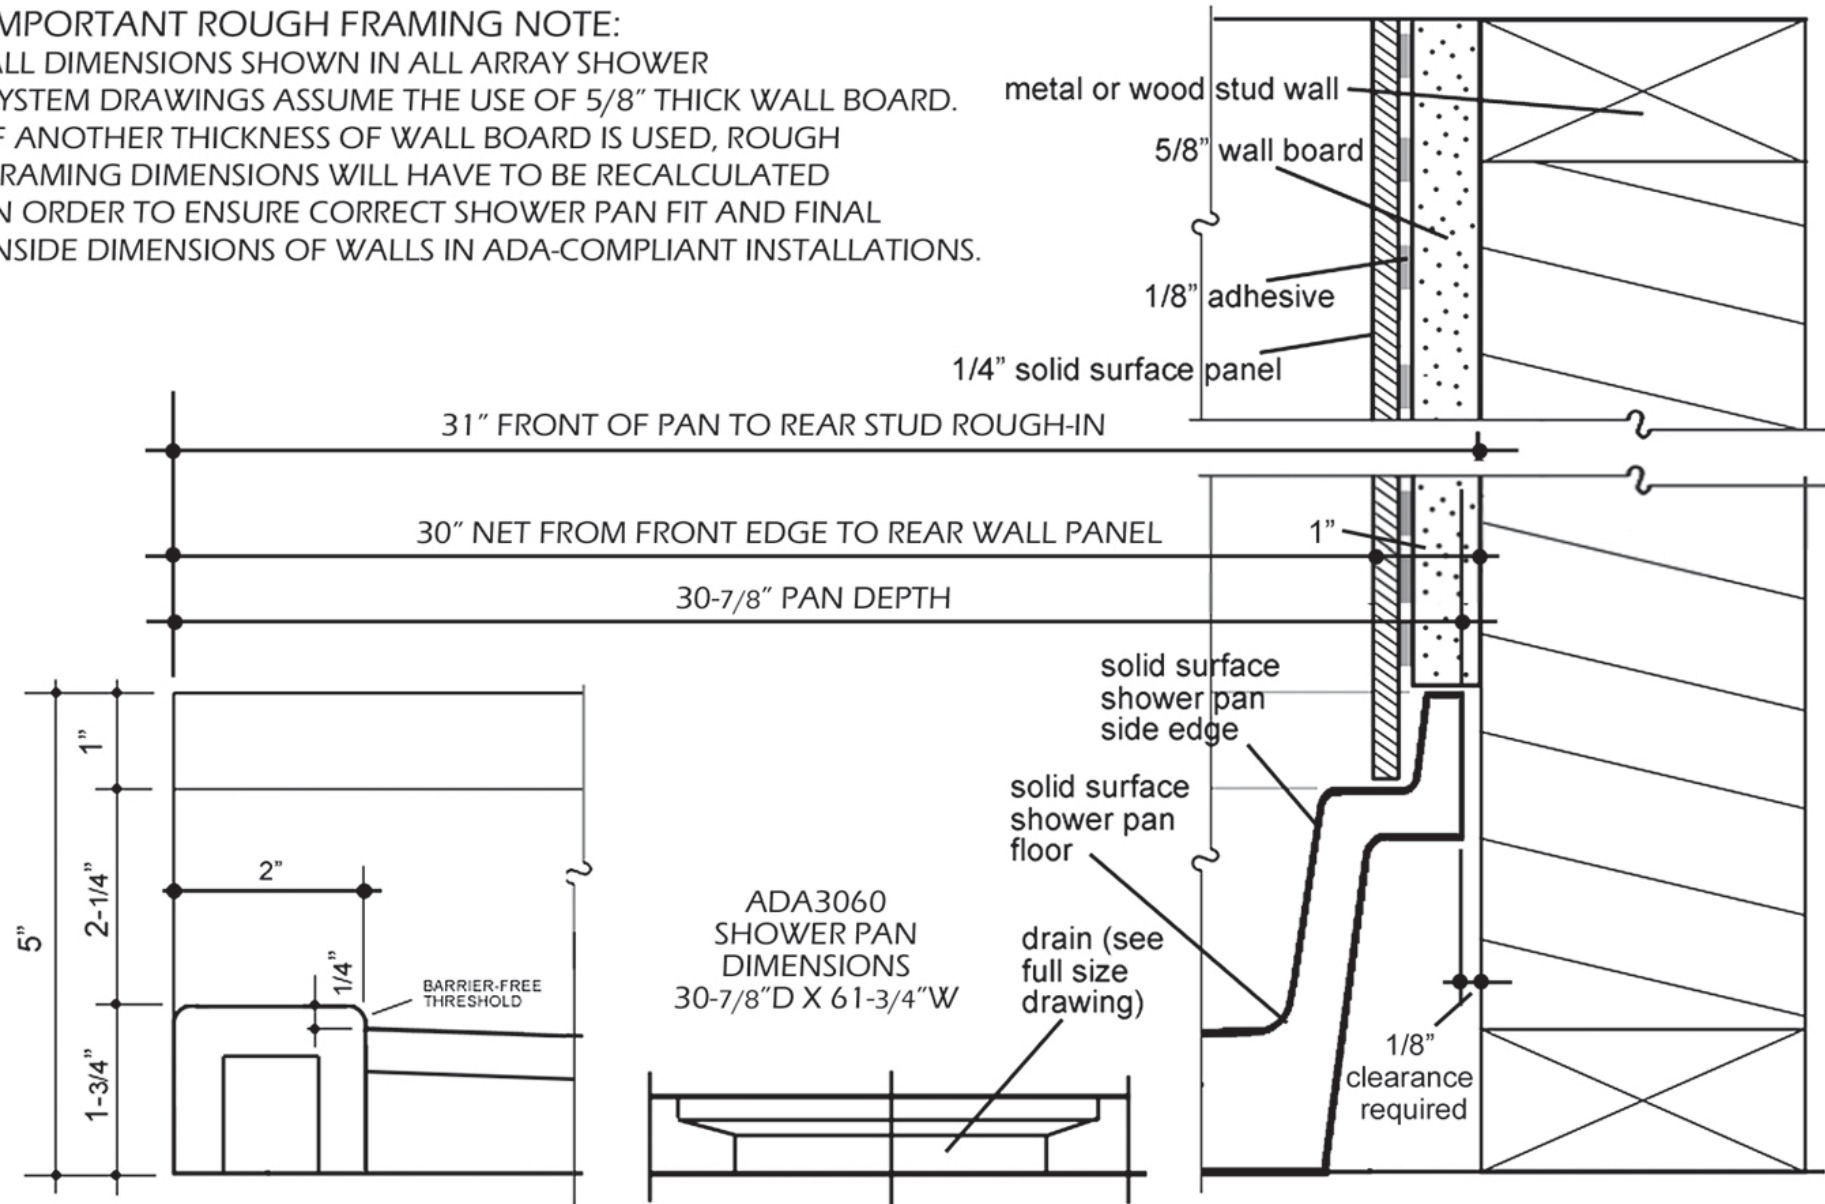


SECTION THROUGH SIDE VIEW OF SHOWER PAN INSTALLATION

Scale: 1/2" = 1"

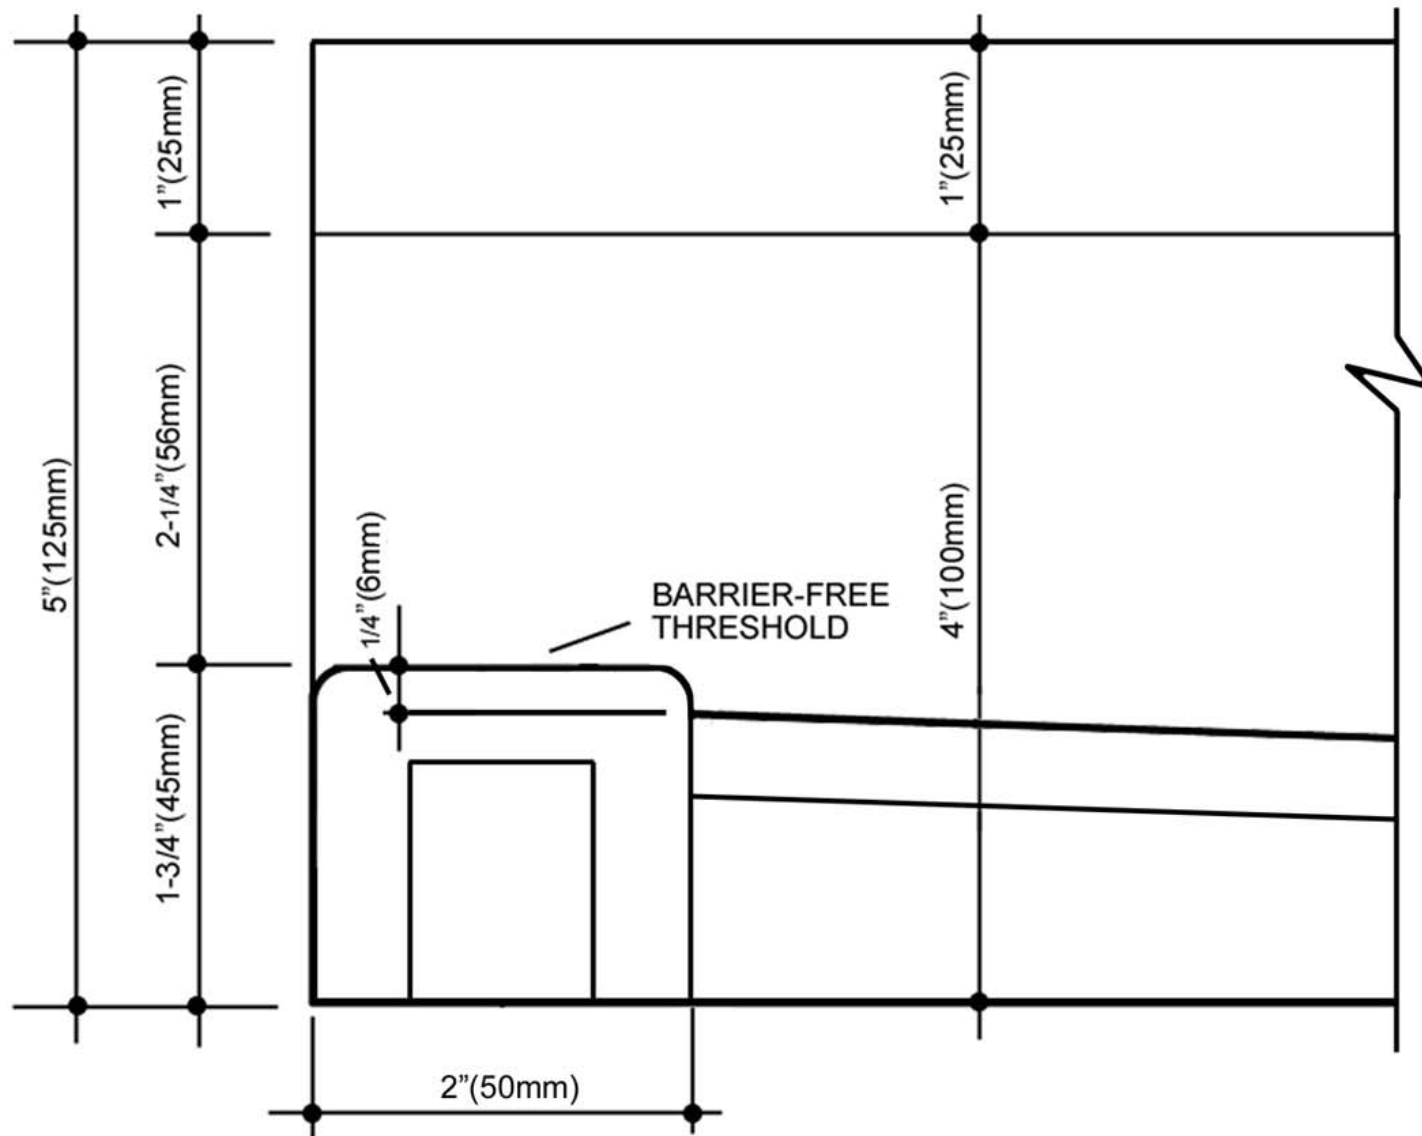


SECTION THROUGH ADA WATER BARRIER THRESHOLD

SCALE: FULL

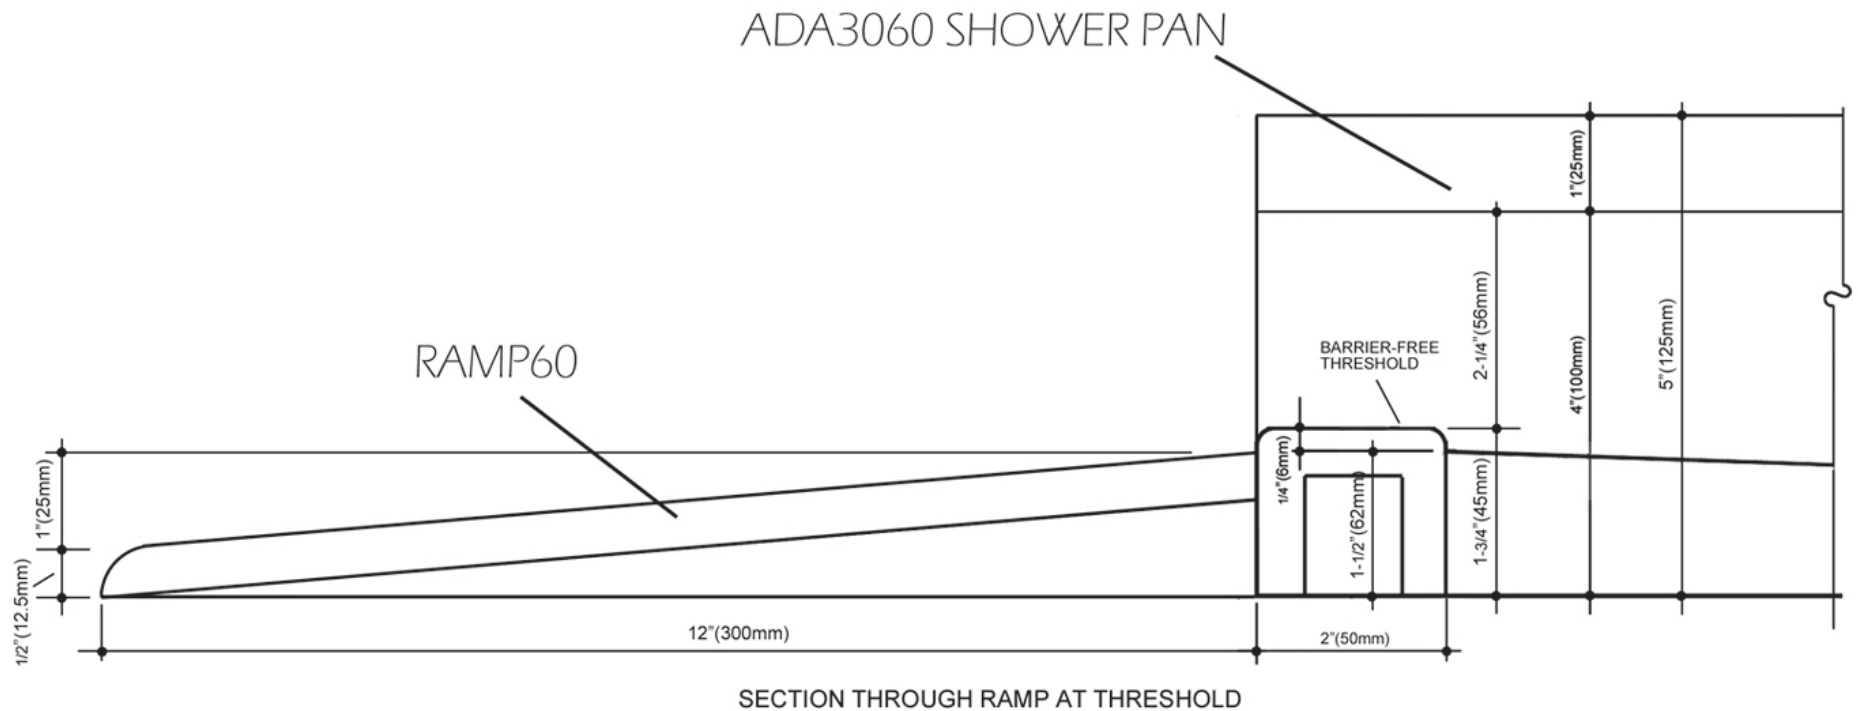

Ramp is optional for shower pan which doesn't depressed or recessed onto floor.
Ramp need to be ordered separately from shower pans.

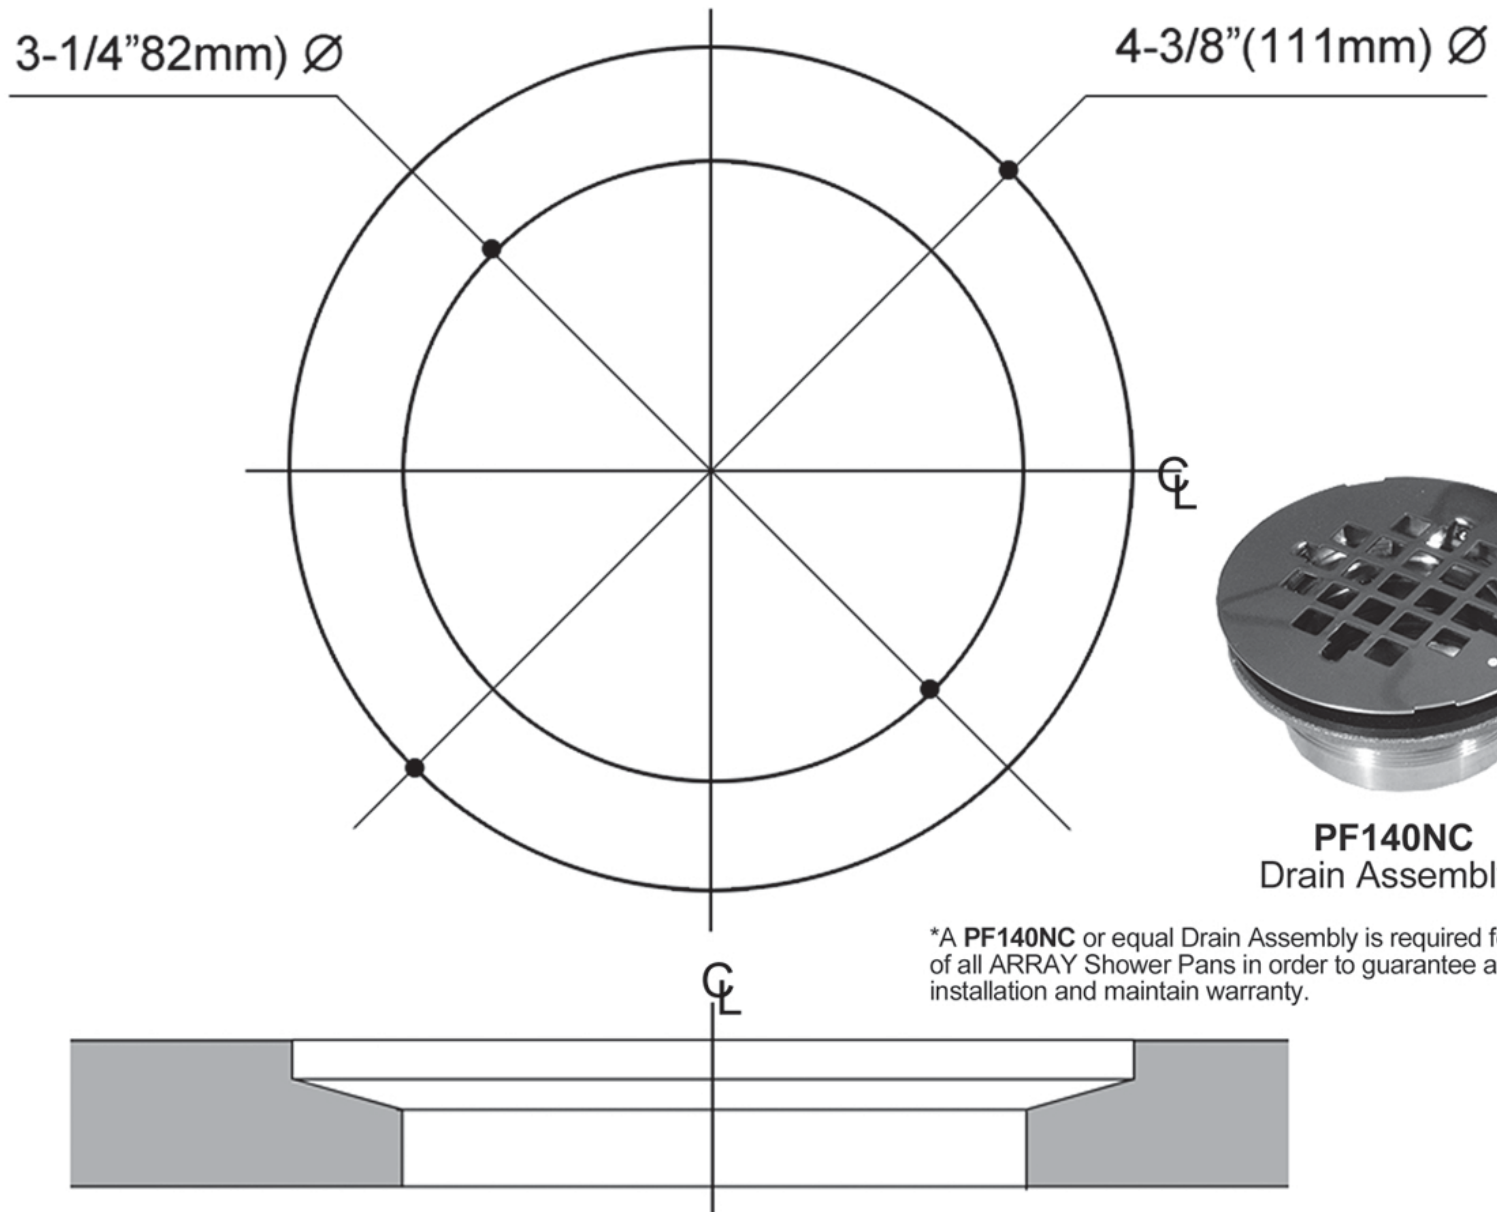

PF140NC
Drain Assembly*

*A **PF140NC** or equal Drain Assembly is required for installation of all ARRAY Shower Pans in order to guarantee a successful installation and maintain warranty.

DRAWING C - DRAIN PLAN & SECTION

Scale: FULL

ARRAY Solid Surface Shower Systems Healthcare, Institutional, and Commercial Projects Installation Instructions

I. Scope of Instructions

The limited instructions offered here are general in nature and assume that the fabricators, installers, plumbers, and others involved in the installation of ARRAY Solid Surface Shower System products have experience with and understanding of solid surface shower components. If this is not the case, the fabricators, installers, plumbers and others involved should notify the General Contractor or Project Manager and contact ARRAY Solid Surface Shower System support staff members at 901.386.2375, Toll Free at 877.778.1149 for total assistance (including detailed custom instructions and shop drawings and related training program and certification opportunities by ARRAY Solid Surface Shower Systems or other organizations).

II. Important rough framing note:

ALL DIMENSIONS SHOWN IN ALL ARRAY SHOWER SYSTEM DRAWINGS ASSUME THE USE OF 5/8" THICK WALL BOARD. IF ANOTHER THICKNESS OF WALL BOARD IS USED, ROUGH FRAMING DIMENSIONS WILL HAVE TO BE RECALCULATED IN ORDER TO ENSURE CORRECT SHOWER PAN FIT AND FINAL INSIDE DIMENSIONS OF WALLS IN ADA-COMPLIANT INSTALLATIONS.

III. Shower Pan Pre-installation Preparation

- a. Drain Location - Check the rough-in opening drain location to make certain it matches the Array Shower System dimensional specifications (as shown in the Submittal drawings supplied for each Shower Pan Model). For custom installations; follow the same procedure with custom shop drawings supplied with specific product orders.
- b. Shower Wall Framing – make certain that the rough-in stud dimensions allow 1/8" space between outside edges of shower pan and adjacent stud walls (as shown in Submittal drawings).
- c. Wood Blocking for Accessory Installation - Check the wood blocking sizes and locations for grab bars, shower seats, and other accessories to ensure proper positioning for structurally sound installations in general and ADA-compliant specifications in particular. (See Submittal drawings.)
- i. Grab Bars – install continuous 2" x 8" blocking horizontally covering the area from 30-1/2" above the slab or sub-floor to 38" above the slab or sub-floor.
- ii. Shower Seats – Install four (4) heavy duty studs (min. 16ga or wood equivalent) from bottom plate to top plate as follows: one (1) stud on the left, two (2) studs back to back (screwed or nailed together) and 16" to the right of the first stud. Install the fourth stud 16" to the right of the two studs joined together. Install one double layer of 3/4" plywood (16" x 48") flush with the surface of all the studs mentioned above and running from the bottom plate to 48" above the bottom plate in both left and right sections. The center pair of studs is to be a specified distance from the intersection of the rear wall framing
- iii. Other Accessories - All other accessories require at least 2" x 6" wood blocking that is to be located to accept all fasteners

IV. Shower Pan Installation

- a. Check the floor condition. Dry-fit the shower pan to make certain that the floor is level and the shower pan does not rock. (If required, level the floor with mortar mixture or thin set material according to best practices standards, local codes, and/or architectural or engineering specifications.)
- b. Check to make certain that proper 1/8" clearance exists between the edges of the shower pan and the side wall framing.
- c. Hook up the shower drain according to the drain installation instructions.
- d. For ADA transfer shower applications, install the shower access ramp with silicone or hard seam (if required).
- e. Cover the shower pan floor with cardboard, plastic sheeting, or similar materials to prevent possible damage during additional construction.

V. Shower Wall Installation

- a. Install moisture resistant wallboard.
- b. Carefully measure and cut any openings for plumbing or accessories in the wall panels as required.
- c. Install 1/4" thick ARRAY Solid Surface wall panels utilizing 1/8" thick adhesive spotted on wallboard as appropriate. Use adhesive to secure wall panels at corners. Bottom edge of wall panels to be seated on shower pan lip. Seal all joints with silicone.
- d. When penetrating the ARRAY Solid Surface wall panels to attach accessories, the penetrations must be larger than the fasteners so as to ensure that fasteners do not come in contact with the wall panels (which could potentially result in a crack in the panel).

VI. Disclaimer:

The information supplied above is given free of charge. It is based upon generally accepted technical and installation data that is common to healthcare, institution, and commercial construction applications. Any information provided herein is subordinate to architectural or engineering drawings or specifications associated with any specific project as well as to any building or ADA code enforcement guidelines. ARRAY Shower Systems assumes no responsibility for results obtained or damages incurred from the use of ARRAY materials either in whole or in part by the purchaser of such materials.

MAXSTONE INTERNATIONAL, LLC

7401 Adrienne Place, Memphis, TN 38133, 901.386.2375, Toll Free 877.778.1149, FAX 901.386.6668, www.ArrayShowers.com

ADA3060 FOUNDATION DETAILS


ADA3060 SHOWER
PAN DIMENSIONS
30-7/8"D X 61-3/4"W

Shower Pan Pre-installation
Preparation


a. **Drain Location** - Check the rough-in opening drain location to make certain it matches the Array Shower System dimensional specifications (as shown on this page) For custom installations, follow the same procedure with custom shop drawings supplied with specific ARRAY product orders.)

b. **Shower Wall Framing** - make certain that the rough-in stud dimensions allow 1/8" space between outside edges of shower pan and adjacent stud walls (as shown on this page).

FOR ADDITIONAL SUPPORT SERVICES AND PRODUCT INFORMATION (INCLUDING CUSTOM SHOP DRAWINGS OR INSTALLATION INSTRUCTIONS, CALL 901.386.2375, TOLL FREE 877.778.1149, OR FAX 901.386.6668.

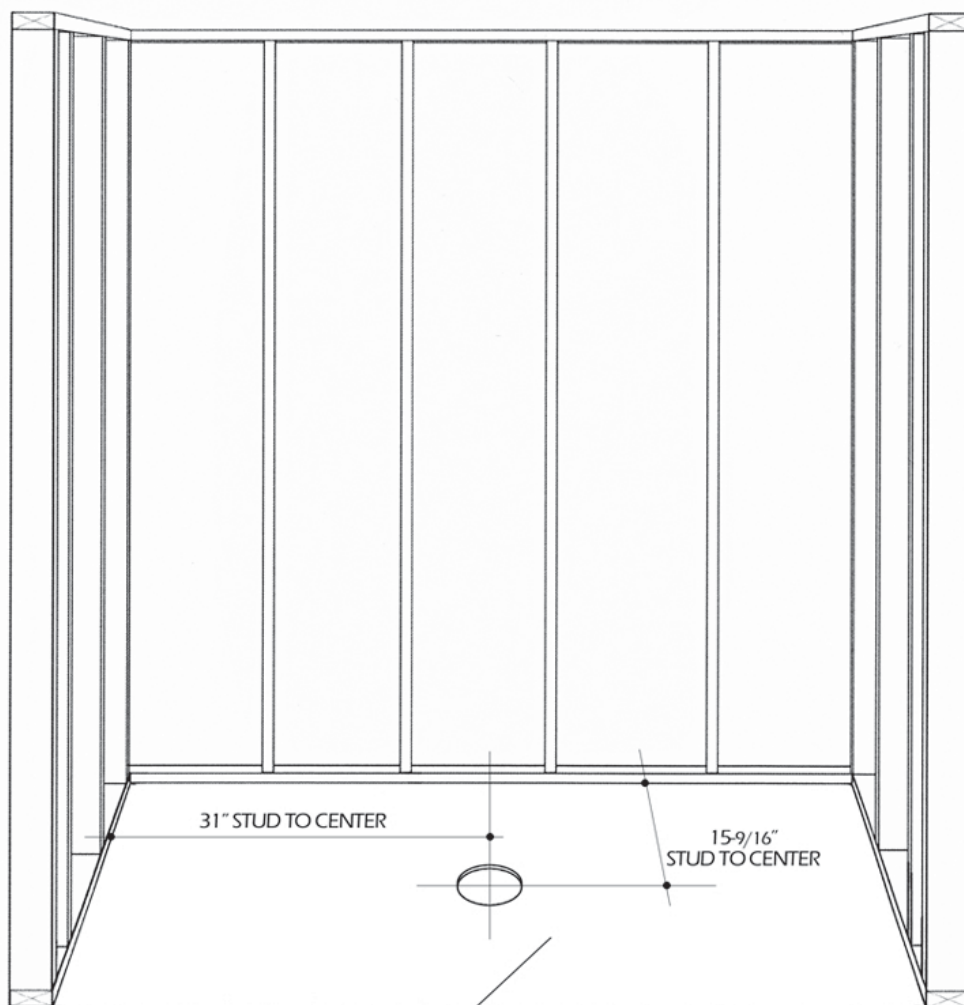


DESIGNATED SHOWER PAN AREA ON CONCRETE SLAB
WITH DRAIN ROUGH-IN

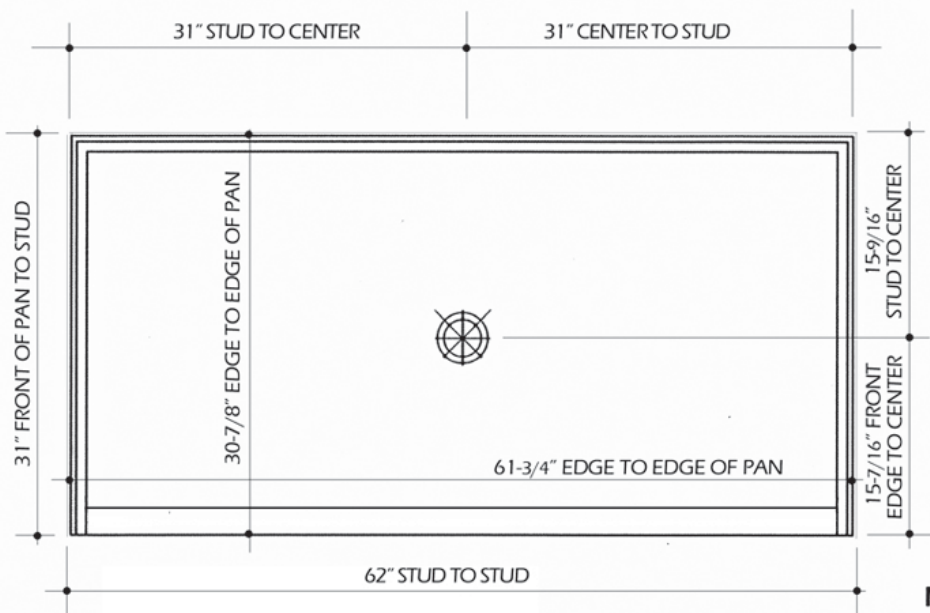

IMPORTANT ROUGH FRAMING NOTE: ALL DIMENSIONS SHOWN IN ALL ARRAY SHOWER SYSTEM DRAWINGS ASSUME THE USE OF 5/8" THICK WALL BOARD. IF ANOTHER THICKNESS OF WALL BOARD IS USED, ROUGH FRAMING DIMENSIONS WILL HAVE TO BE RECALCULATED IN ORDER TO ENSURE CORRECT SHOWER PAN FIT AND FINAL INSIDE DIMENSIONS OF WALLS IN ADA-COMPLIANT INSTALLATIONS.

MAXSTONE INTERNATIONAL, LLC
7401 Adrienne Place, Memphis, TN 38133
901.386.2375, Toll Free 877.778.1149
FAX 901.386.6668
www.ArrayShowers.com

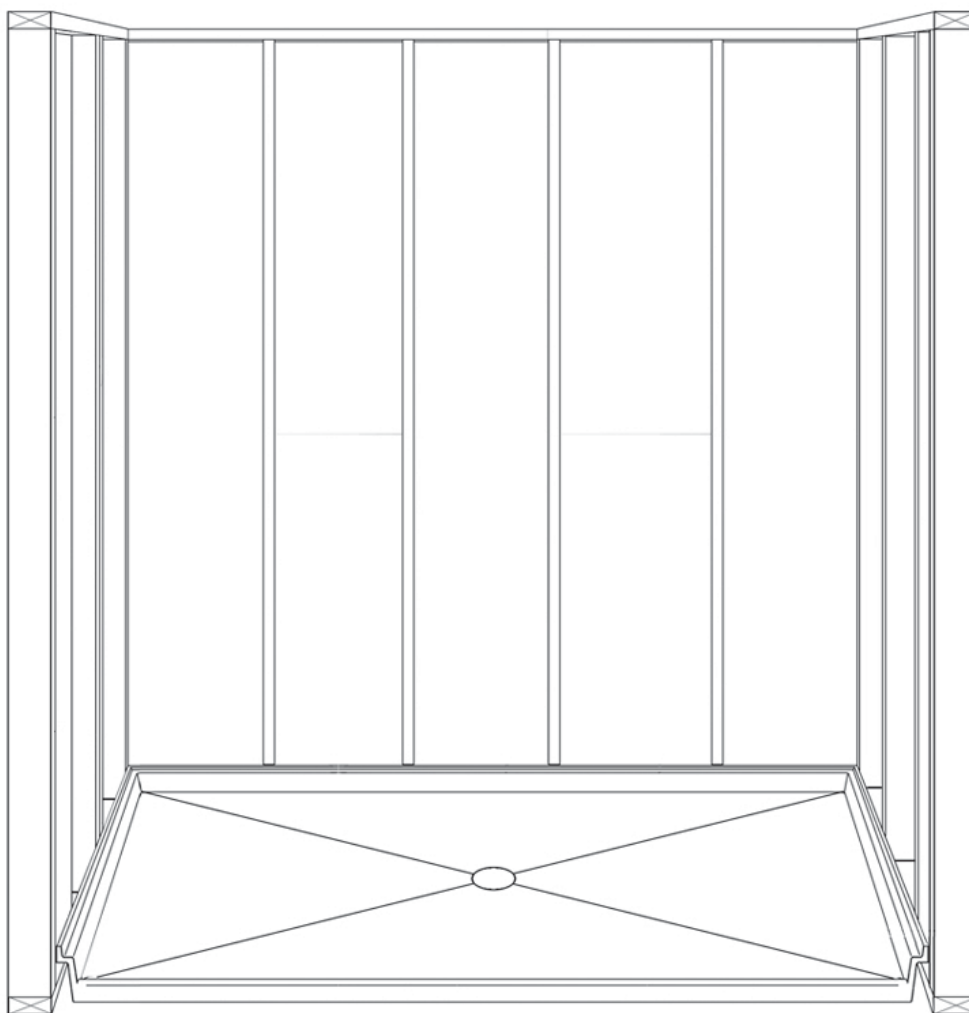

ADA3060 SHOWER PAN INSTALLATION DETAILS

ADA3060 PAN DIMENSIONS

30-7/8"D X 61-3/4"W

Shower Pan Installation

- a. Check the floor condition.
Dry-fit the shower pan to make certain that the floor is level and the shower pan does not rock. (If required, level the Floor with mortar mixture or thin set material according to best practices standards, local codes, and/or architectural or engineering Specifications.)
- b. Check to make certain that proper 1/8" clearance exists between the edges of the shower pan and the side wall framing.
- c. Hook up the shower drain according to the drain installation instructions.
- d. For ADA transfer shower applications, install the shower access ramp with silicone or hard seam (if required).
- e. Cover the shower pan floor with cardboard, plastic sheeting, or similar materials to prevent possible damage during additional construction.

FOR ADDITIONAL SUPPORT
SERVICES AND PRODUCT
INFORMATION (INCLUDING
CUSTOM SHOP DRAWINGS OR
INSTALLATION INSTRUCTIONS,
CALL 901.386.2375,
TOLL FREE 877.778.1149,
OR FAX 901.386.6668.

MAXSTONE INTERNATIONAL, LLC

7401 Adrienne Place, Memphis, TN 38133

901.386.2375, Toll Free 877.778.1149

FAX 901.386.6668

www.ArrayShowers.com

ADA3060 PAN - WOOD BLOCKING FOR ACCESSORY INSTALLATION DETAILS

ADA3060 PAN DIMENSIONS

30-7/8"D X 61-3/4"W

Check the wood blocking sizes and locations for grab bars and fold-down seats to ensure proper positioning for structurally sound installations in general and ADA-compliant specifications in particular.

- i. Grab Bars – install continuous 2" x 8" blocking horizontally covering the area from 30.5" above the sub-floor to 38" above the slab or sub-floor.
- ii. Shower Seats – Install four (4) heavy duty studs (min. 16ga or wood equivalent) from bottom plate to top plate as follows: one (1) stud on the left, two (2) studs back to back (screwed or nailed together) and 16" to the right of the first stud. Install the fourth stud 16" to the right of the two studs joined together. Install one double layer of 3/4" plywood (16" x 48" flush with the surface of all the studs mentioned above and running from the bottom plate to 48" above the bottom plate in both left and right sections. The center pair of studs is to be a specified distance from the intersection of the rear wall framing
- iii. Other Accessories - All other accessories require at least 2" x 6" wood blocking that is to be located to accept all fasteners



FOR ADDITIONAL SUPPORT SERVICES AND PRODUCT INFORMATION (INCLUDING CUSTOM SHOP DRAWINGS OR INSTALLATION INSTRUCTIONS, CALL 901.386.2375, TOLL FREE 877.778.1149, OR FAX 901.386.6668.


MAXSTONE INTERNATIONAL, LLC

7401 Adrienne Place, Memphis, TN 38133
901.386.2375, Toll Free 877.778.1149

FAX 901.386.6668

www.ArrayShowers.com

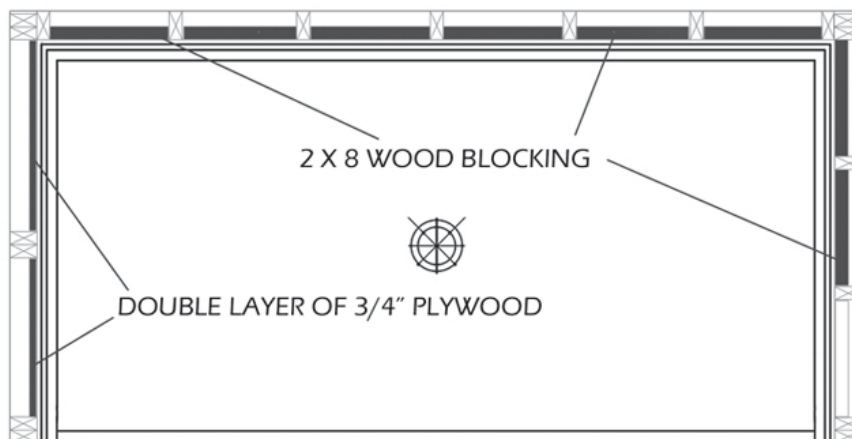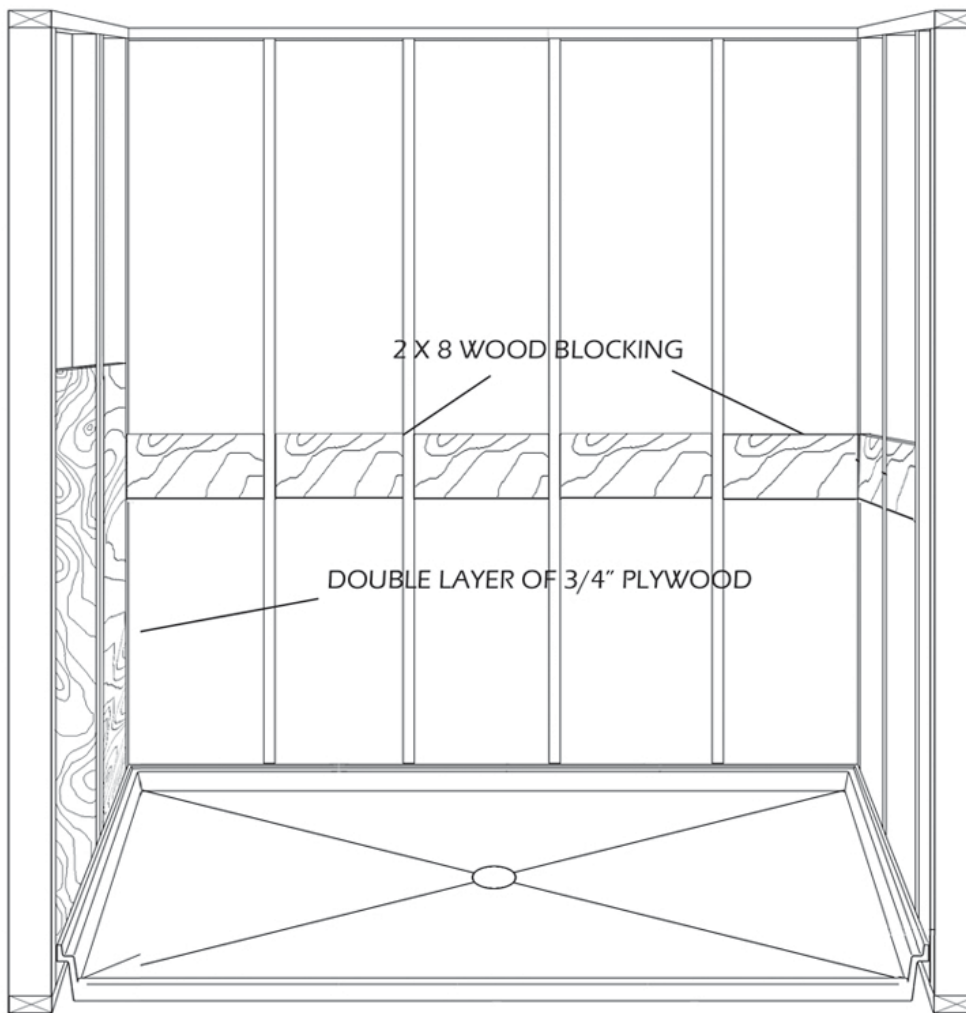

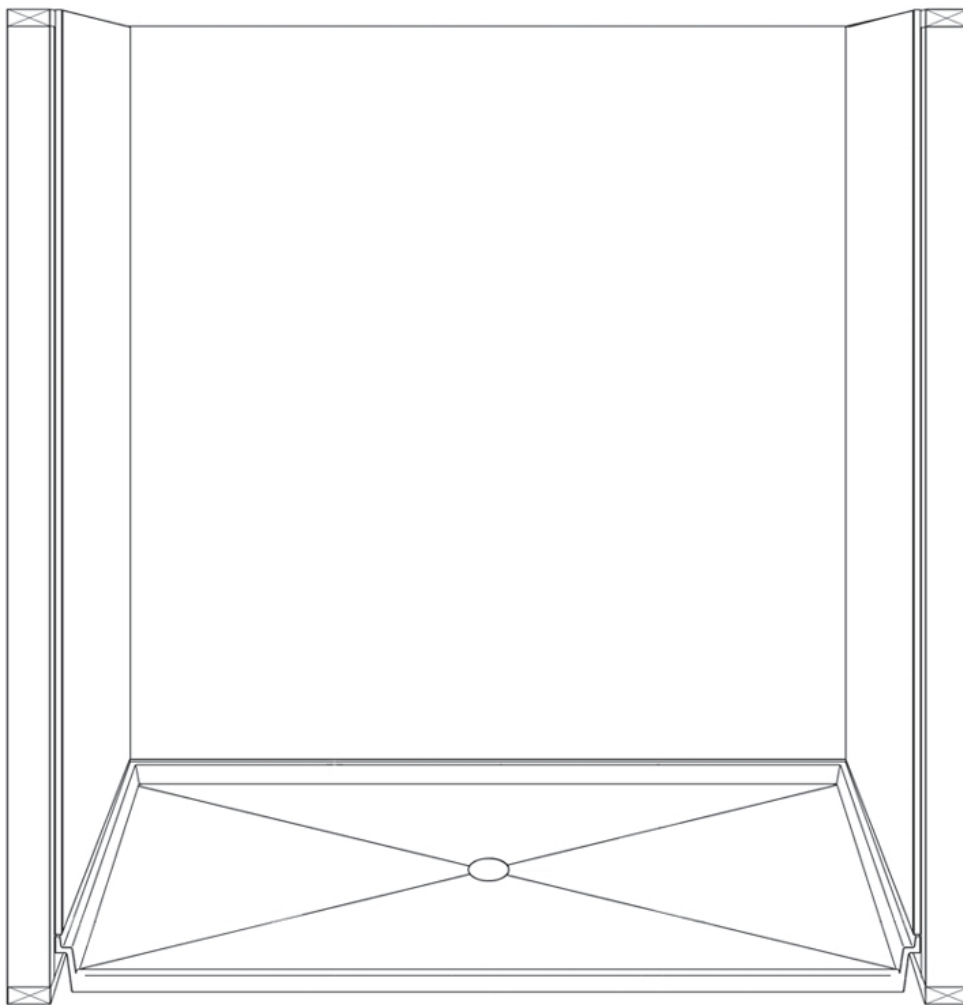


ADA3060 MOISTURE RESISTANT WALLBOARD DETAILS

Shower Wall Installation

- a. Install moisture resistant wallboard.
- b. Carefully measure and cut any openings for plumbing or accessories in the wall panels as required.

FOR ADDITIONAL SUPPORT SERVICES AND PRODUCT INFORMATION (INCLUDING CUSTOM SHOP DRAWINGS OR INSTALLATION INSTRUCTIONS, CALL 901.386.2375, TOLL FREE 877.778.1149, OR FAX 901.386.6668.

MAXSTONE INTERNATIONAL, LLC
7401 Adrienne Place, Memphis, TN 38133
901.386.2375, Toll Free 877.778.1149
FAX 901.386.6668
www.ArrayShowers.com

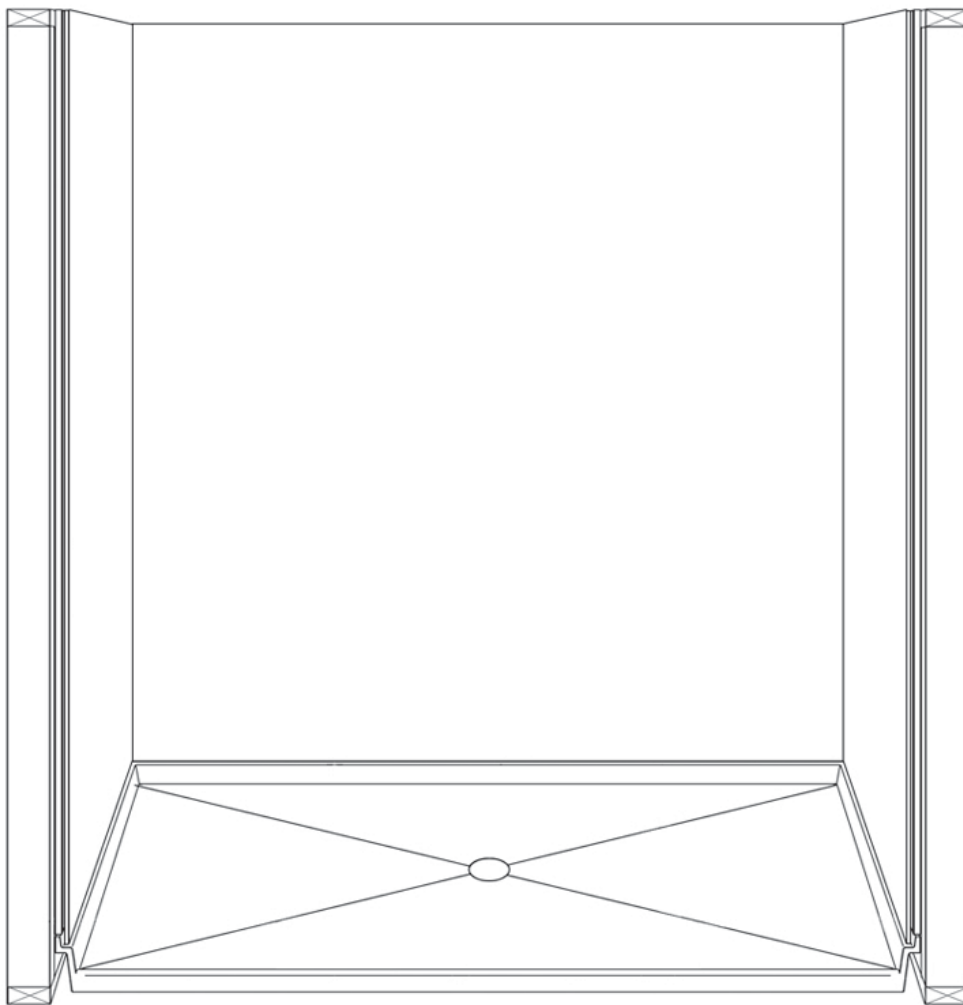

ADA3060 SOLID SURFACE WALL PANEL INSTALLATION DETAILS

Install 1/4" thick ARRAY Solid Surface wall panels utilizing 1/8" thick adhesive spotted on wallboard as appropriate. Use adhesive to secure wall panels at corners. Bottom edge of wall panels to be seated on shower pan lip. Seal all joints with silicone. d. When penetrating the ARRAY Solid Surface wall panels to attach accessories, the penetrations must be larger than the fasteners so as to ensure that fasteners do not come in contact with the wall panels (which could potentially result in a crack in the panel).

ARRAY Standard ADA Wall Panel Sizes:

- 60-1/2" x 96" x 1/4"
- 36" x 96" x 1/4"

FOR ADDITIONAL SUPPORT
SERVICES AND PRODUCT
INFORMATION (INCLUDING
CUSTOM SHOP DRAWINGS OR
INSTALLATION INSTRUCTIONS,
CALL 901.386.2375,
TOLL FREE 877.778.1149,
OR FAX 901.386.6668.

MAXSTONE INTERNATIONAL, LLC
7401 Adrienne Place, Memphis, TN 38133
901.386.2375, Toll Free 877.778.1149
FAX 901.386.6668
www.ArrayShowers.com